

## 802.11n Wireless USB Adapter

**Quick Installation Guide** 

WLn-301

Ver: 1.0




4Gon www.4Gon.co.uk info@4gon.co.uk Tel: +44 (0)1245 808295 Fax: +44 (0)1245 808299


Package Contents	Page 1
Network Card Installation	Page 2
Connect to Wireless Access Point	Page 4
Package Contents	
Before you starting to use this USB wireless network card, please check if there's an in the package, and contact your dealer of purchase to claim for missing items:	nything missing
□ USB Wireless Network Card	1
— Quick installation guide (1 pcs)	
☐ User manual / device driver CDROM (1 pcs)	3

## **Network Card Installation**


Please follow the following instructions to install your new USB wireless network card:

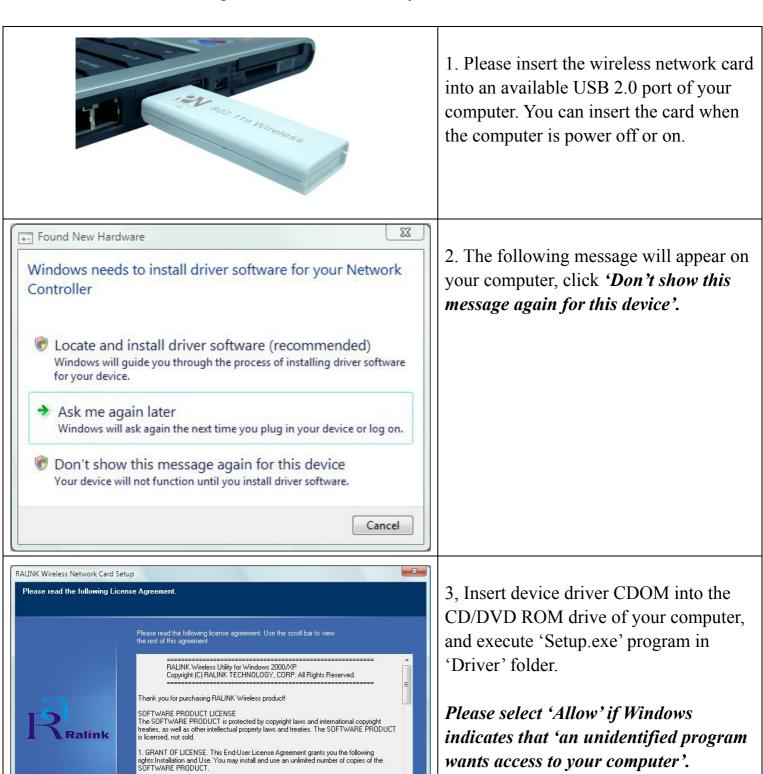

Reproduction and Distribution. You may reproduce and distribute an unlimited number of copies of the SOFTWARE PRODUCT; provided that each copy shall be a true and complete

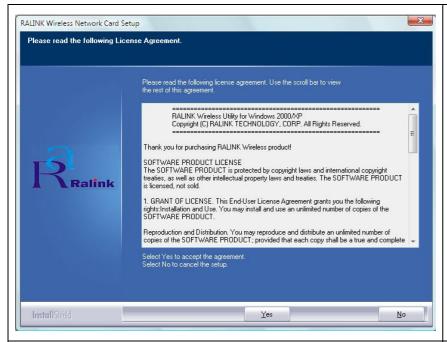


4. Please read the end user license agreement and click 'Yes' to accept license agreement.

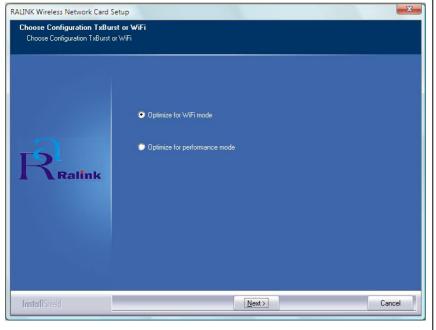

5. Please select 'Optimize for WiFi mode' for wireless compatibility, then click 'Next>'. If you want to enhance wireless performance, please select 'Optimize for performance mode'. However, wireless compatibility is not guaranteed when you use this mode. Please refer to user manual for details of performance mode.


If you see 'Found New Hardware' message again, please ignore it and wait.

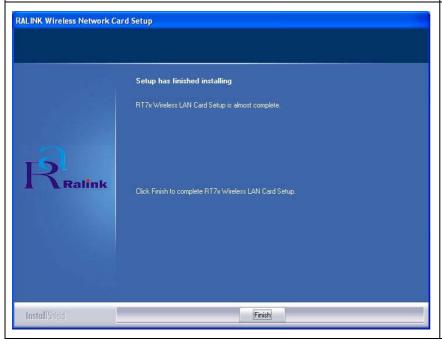


6. When you see this message, please click 'Finish' to complete the driver installation process.

## Connect to Wireless Access Point


Using Configuration Utility to Connect to Wireless Access Point

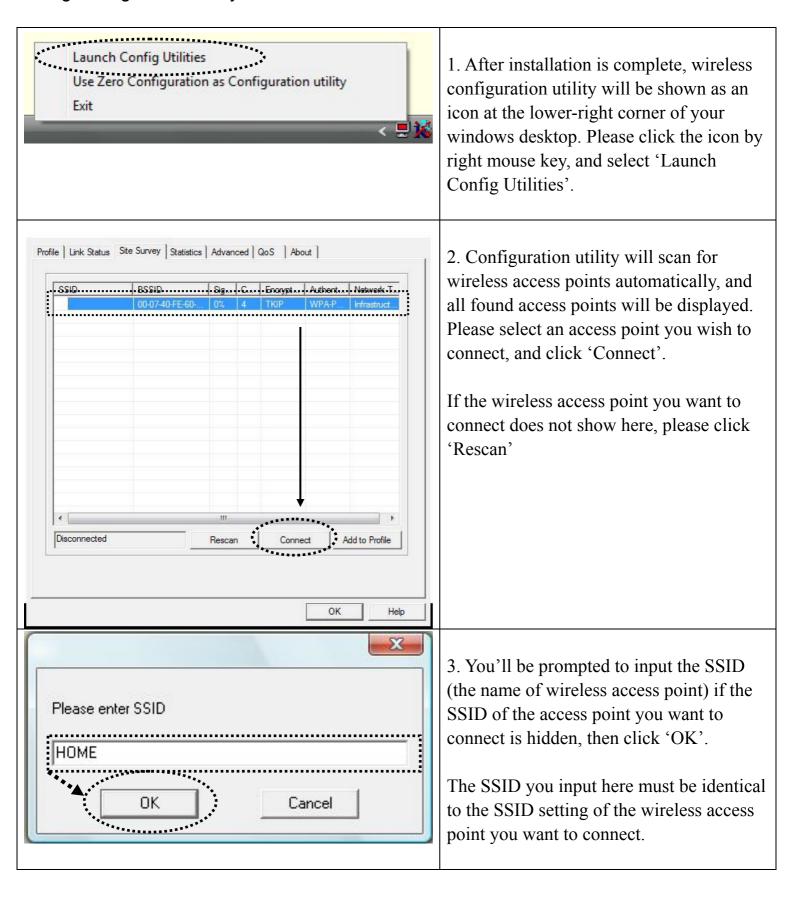

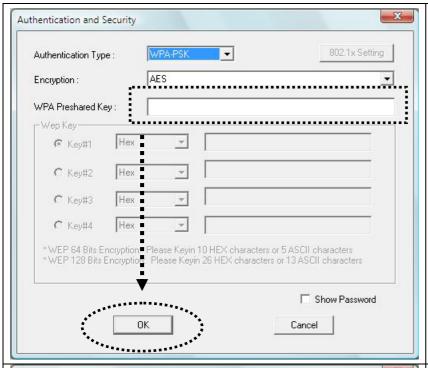

4. If the wireless access point uses encryption, you have to input WEP passphrase or WPA preshared key. Please ask the owner of the wireless access point you want to connect, and input the correct passphrase / preshared key here, then click 'OK'. If the value you inputted here is wrong, you will not be able to connect to wireless access point.

Authentication type is selected automatically, please don't change it.

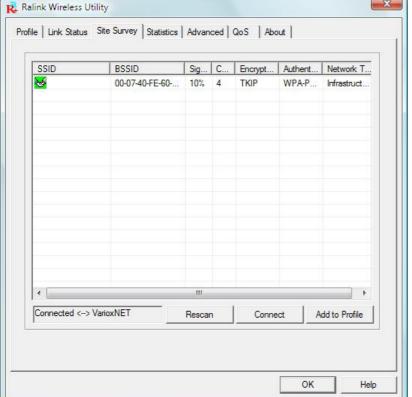

5. If the wireless access point is successfully connected, you'll see a 'Connected' message displayed at the lower-left corner of wireless configuration utility window. Click 'OK' to exit.

For advanced settings and other features of this USB wireless network card, please refer to user manual enclosed in supplied CD-ROM.

