


AP One AX


Ceiling Mount



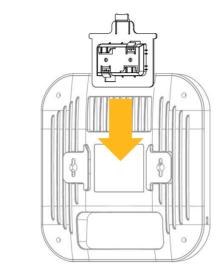

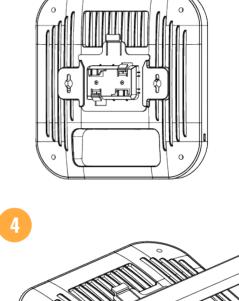

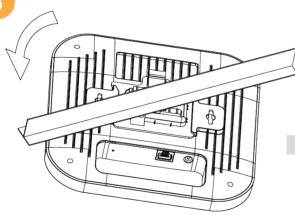

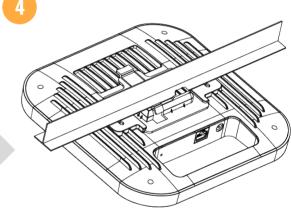

Steps:


- 1. Slide the ceiling mount base into the slot of the Access Point.
- 2. Hold the Access Point with one hand to reach the other hand over the T-Rail sides of the bracket.
- 3. Then hook the stationary end of the ceiling mount bracket onto the T-Rail.




©Peplink. All rights reserved.



Wall Mount

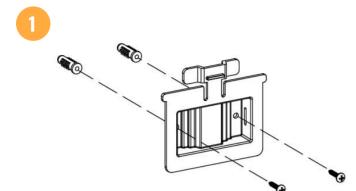



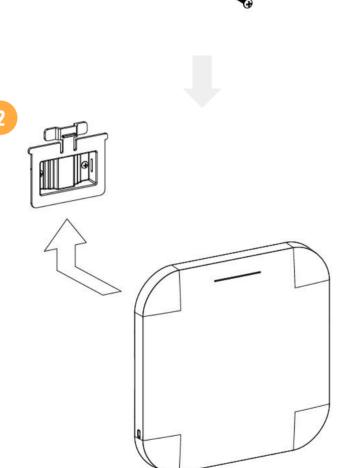

Steps:

- Continued from A, determine where the Access Point to be placed and mark location on the surface for the two mounting holes.
- Use the appropriate drill bit to drill two 8.1mm diagram and 26mm depth holes in the markings and hammer the bolts into the openings.
- 3. Screw the anchors unto the holes until they are flush with the wall; screw the included screws into the anchors.
- 4. Place the Access Point against wall with the mounting screw heads.